Installation Chimney Safety

How To Plan Your Installation

Step 1. Measure the diameter of the appliance flue outlet. Select chimney and either DVL or Dura-Black connector stovepipe with the same size diameter as the appliance flue outlet.

Step

pitch has a vertical rise of 6" over a horizontal distance of 12". Select the appropriate flashing. See Figure 1.

Measure the roof pitch. For example a 6/12

Step 3. Determine the minimum chimney height above the roof line. Building codes require a minimum of 3' above the roof penetration and at least 2' higher than any portion of a building within 10'. See Figure 1.

If an offset is required to avoid rafters or other

Step

obstructions, measure the horizontal distance required and the vertical height available. Both 15° and 30° elbows are available. Elbows greater than 30° are not allowed in the United States. Elbow straps ensure adequate support. See Figure 2.

Determine the total length of chimney and stovepipe required for the installation. To calculate the installed per length of 5"-8" DuraTech pipe, subtract 1 1/4" per joint. For 10"-24" diameter, subtract 3/4" per joint of pipe. Subtract 1 1/4" per joint of DuraBlack stovepipe. Subtract 1 1/2" per joint of DVL stovepipe. Minimum chimney height, at sea level, of straight vertical chimney is 10' to 15' above the appliance outlet. Higher elevations, or the use of elbows or a tee, will require approximately 30% to 60% more height to provide for an adequate draft.

2 FT. MIN. ABOVE HIGHEST POINT OF THE BUILDING WITHIN 10 FT. 3 FT. MIN. ABOVE ROOF PENETRATION MINIMUM CHIMNEY HEIGHT REQUIREMENT

Figure 1

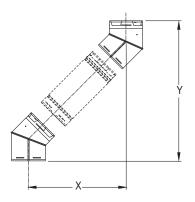


Figure 2

A double-wall all-fuel chimney for appliances fueled by wood, oil, coal, or gas.

Designed to stay cool on the outside, to provide a hot draft on the inside, to boost stove efficiency, and to provide for a fire-safe design that protects both the chimney and the building. This double wall chimney features a flexible refractory insulation blanket between walls. The refractory insulation is held securely in place, eliminating hot spots common with loose fill insulations. In the event of a creosote fire, the blanket insulation permits the chimney liner to expand outwards in a radial direction.

DuraVent's DuraTech for wood-burning stoves is built with a stainless or aluminized steel outer wall and a stainless steel inner liner. It is insulated with a blanket insulation. DuraVent's unique twist-lock design requires no tools and is easy to install, providing an exceptionally firm and tight connection.



Applications

5"-8" DuraTech is a double-wall, all-fuel chimney system for use with wood stoves, fireplaces, furnaces, boilers, ranges, water heaters, or other appliances fueled by wood, oil, coal, or gas, and zero-clearance fireplaces that are factory-built.

Materials and Construction

Specifications

5"-8" diameter pipe features inner wall of .020" 430 stainless steel. Outer wall options of .016" 430 stainless steel or .021" galvalume steel. A Thermal Tech (refractory) blanket insulation is encased between walls. Stainless steel end rings seal the pipe.

DuraTech features light weight insulation, twist-lock fittings, support boxes with factory installed male end coupler, elbows with 360° swivel base, select black finish pipe lengths, five foot length pipe sections, and adjustable pipe lengths.

Clearances

2" clearance to combustibles.

Shrouds

UL Listed with DuraVent shroud specifications. Information available online at www.duravent.com or call and request L157.

Diameters

5"-8"

Listings

c-UL-us Listed to UL 103 HT and ULC S604 (MH7399) (Stainless steel outer wall required for installation in Canada).

Contact

Tel: 800-835-4429


Professional Technical Help

DuraVent prides itself on providing the best customer service and technical support in the industry.

Our Customer Support Team is available to answer technical questions.

Monday – Friday 5:30am – 4pm PST | 8:30am – 7pm EST

Fax: 707-446-4740 customerservice@duravent.com techsupport@duravent.com

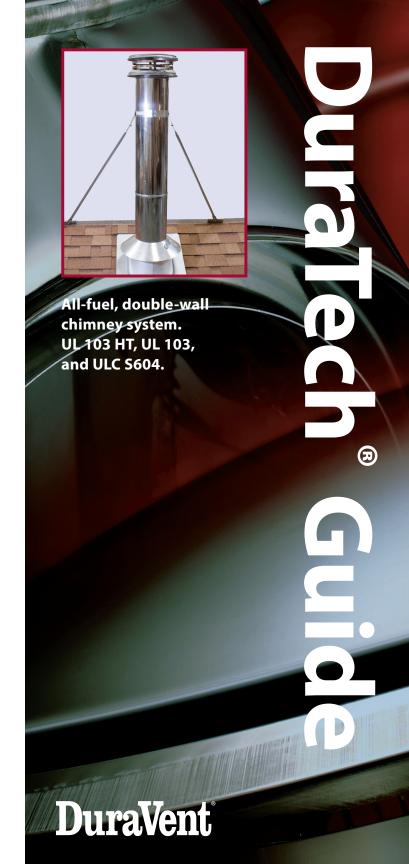

800.835.4429 | 707.446.4740 Fax | www.duravent.com L923_810007459_Brochure_DuraTech Install Guide_07-20-17_V2

Typical Installations


DuraTach®


Duratecn
DVL or DuraBlack
Ceiling Support
Wall Thimble
Chimney Pipe
Attic Insulation Shield
Flashing
Storm Collar
Chimney Cap
Elbow
Elbow Strap
Tee with Tee Cap
Tee Support
Chase Top Flashing
Base Tee/Double Tee
Anchor Plate or Anchor Plate with Damper
Roof Support
Finishing Collar

DVL Adapter, DuraBlack Slip


19 DVL Adapter (w/ or w/o damper)

Connector, or Snap-Lock Adapter

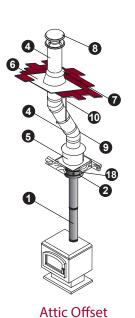


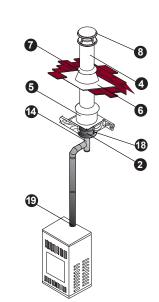


Oil Furnace

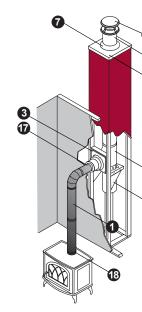




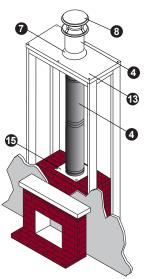



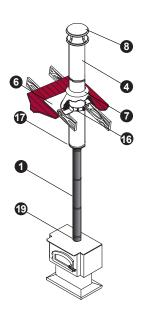



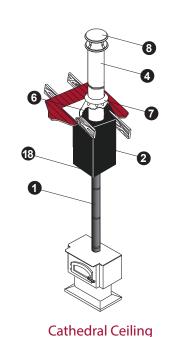

With Support Box

• DVL/DuraBlack Chimney Adapter must be used when connecting DVL pipe to a Ceiling Support Box or Finishing Collar. When connecting DuraBlack pipe, a DVL/DuraBlack Chimney Adapter, DuraBlack Slip Connector, or Snap-Lock Adapter

· Wall Thimble must be installed with an appropriate length of chimney pipe for all horizontal through-the-wall installations. To accommodate thicker walls, the telescoping pieces of the Wall Thimble can be separated, and a field-fabricated extension may be

must be used.

- Attic Insulation Shield must be used in all installations that pass through an attic, regardless of whether the attic is insulated or
- Firestop Radiation Shield must be used when a chimney passes through a floor or ceiling without a support box.

DuraTech® Chimney Installation

The following is a brief overview of a typical installation. Detailed installation instructions can be found at www.duravent.com.



1. Drop a plumb line to center of stove flue collar. Mark center point on ceiling. Refer to installation instructions for framing dimensions.

6. Slip insulation shield over chimney until base sits

11. Slip the flashing over the roof hole so the top

edge is under the shingles above. Nail the flashing to

the roof across the top and down 1/2 each side. Seal

flashing and nailheads with weatherizing sealant.

Nail to opening or screw to box.

squarely on framed opening or nests in the support box.



2. Slide the chimney support box into the framed opening from below, and level it. At least 2" of the box should extend below finished ceiling.



3. Nail the chimney support box to the framed opening from above. Use at least two 8 penny nails on each side.



4. Screw the support box trim to the ceiling.



5. Lower the first chimney section over short piece of pipe in the bottom of the support box. Push together and twist to lock.



7. Wrap insulation shield collar around chimney. Slide it down to the shield.

house within 10 ft.



8. Drop a plumb line from roof to center of chimney. This establishes the center point for cutting a round hole through the roof.



9. Hole in roof must provide at least a 2" clearance all around the chimney. Add more chimney sections and twist to lock.



10. Complete the chimney installation above the roof by adding more chimney sections. Make sure the chimney is plumb.



12. Add more chimney sections until chimney is at least 3 ft above roof, and at least 2 ft above any part of your collar will meet chimney



13. Slip storm collar around chimney and slide down. Apply high temperature silicone sealant where storm



penetration an Extended Roof Bracket is needed.



15. Press chimney cap into the last section of pipe. To clean remove the (4) screws and brush the inner sleeve.

